


Ir y



1

Installation

1. Lift and secure the rear cable channel to the enclosure, ensuring that the three hooks on the back of the rear cable channel lock onto the three braces of the enclosure.
2. Move the rear cable channel to the installation position.
3. Align the rear cable channel so that the symbols are visible through the holes at the top and bottom of the rear cable channel.

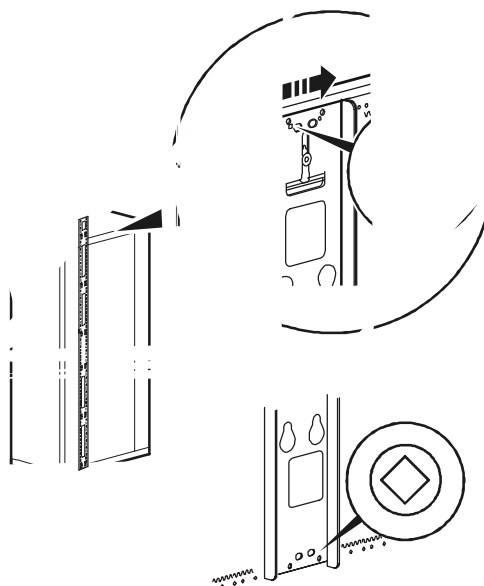

4. Push the screw in the rear cable channel up and tighten the screw to lock it into place.

ns1016a990-2243-001

